 


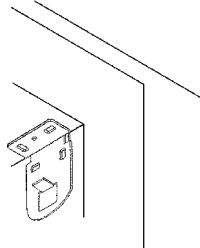
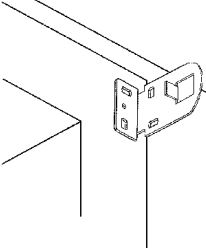
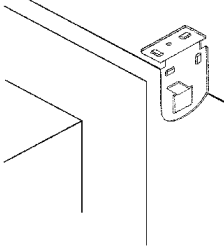
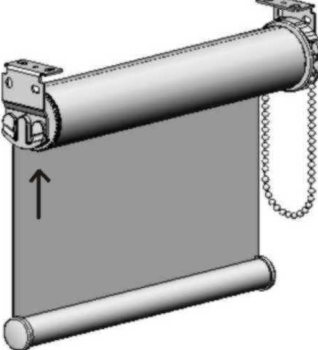
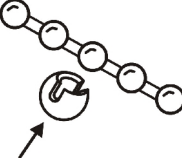


Roller Blind Installation & Care Instructions

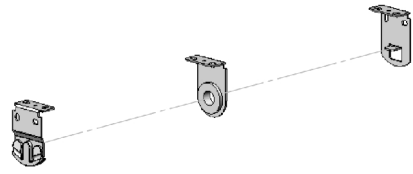
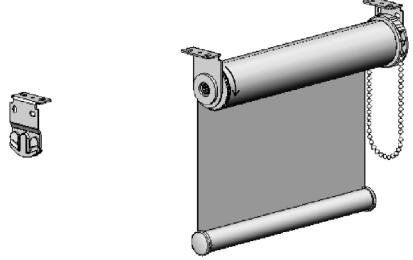
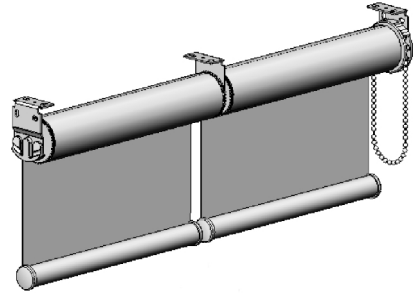
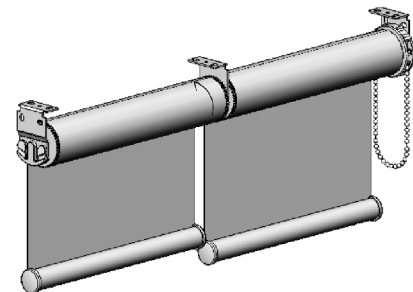
INSTALLATION INSTRUCTIONS

ROLLER BLINDS (ACMEDA HARDWARE)

<p>Unpack and identify the loose fittings that are packed with each blind.</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>PIN END BRACKET</p> </div> <div style="text-align: center;">  <p>CONTROL END BRACKET</p> </div> <div style="text-align: center;">  <p>CHAIN STOPPER</p> </div> </div>
<p>The brackets can be recess fixed (A), wall fixed (B) or ceiling fixed (C). Always remember to use at least 2 screws per bracket.</p> <p>Double-check your measurements before final fixing and make sure that the brackets are perfectly level.</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>RECESS (A)</p> </div> <div style="text-align: center;">  <p>WALL (B)</p> </div> <div style="text-align: center;">  <p>CEILING (C)</p> </div> </div>
<p>Offer the blind up to the brackets.</p> <p>Insert the control end first and then push the pin end into place. It will “click” when located.</p> <p>Check that both ends of the blind are securely held within the brackets.</p> <p>To remove the blind, rotate the clear plastic knurled wheel so that the pin end connection retracts inside the blind.</p>	
<p>The chain stopper should be fitted to the control chain to prevent users from lowering the blind too far. Be careful to position it properly as it is difficult to remove. It is a condition of the warranty that this item is correctly fitted.</p>	
<p>Notes:</p> <ul style="list-style-type: none"> • If the blind wanders to one side when rolling up, it may be that the brackets are not level. Re-fix the brackets, and if this does not solve the problem, contact the factory for advice. • If you need to change controls from one side to the other, it is recommended that you contact the factory for advice, as some parts are specific to either the right or left sides. • Blinds should not fit too tightly or too loosely in the brackets, and should have approximately 1mm to 3mm clearance. If not, re-position the brackets to suit. (on tight fitting blinds, induced friction may cause a drive wheel to retract and allow a blind to fall down & on loose fitting blinds, a small movement of a bracket could allow the blind to completely come out of a bracket and fall down). • Ensure that your hands & all work surfaces are scrupulously clean. Pen ink or other contaminants can easily be transferred onto fabric, and may be impossible to remove. 	

INSTALLATION INSTRUCTIONS

ROLLER BLINDS (ACMEDA PIGGYBACK)

<p><u>Fit the brackets.</u></p> <p>Mount the control bracket, intermediate bracket(s) and idle end bracket in desired position to wall or ceiling.</p> <p>VERY IMPORTANT: The intermediate brackets must be aligned perfectly. If not, induced friction could cause a drive wheel to retract and allow a blind to fall down.</p>	
<p><u>Fit the Control Blind.</u></p> <p>Rotate the clear plastic knurled intermediate drive wheel so that the female connection retracts inside the blind.</p> <p>Mount the control end on to the control bracket, raise the other end up to it's bracket and then rotate the plastic knurled wheel to release the female connection into the intermediate bracket.</p>	
<p><u>Fit the Slave Blind(s).</u></p> <p>Rotate the clear plastic knurled intermediate drive wheel so that the male connection retracts inside the blind.</p> <p>Mount the idle end on to the idle end bracket, raise the other end up to it's bracket and then rotate the plastic knurled wheel to release the male connection into the intermediate bracket.</p> <p>The connection between the blinds will now engage.</p>	
<p><u>Bottom Levelling.</u></p> <p>Whilst holding the Slave Blind, rotate the clear plastic knurled intermediate drive wheel so that the male connection retracts inside the blind. Turn the Slave Blind until the bottom rails line up and then rotate the plastic knurled wheel back to release the connection and link the blinds together again. It is best to align the blinds when they are fully lowered.</p> <p>Finally, install the intermediate bracket cover if desired.</p>	

Notes:

- Blinds should not fit too tightly or too loosely in the brackets, and each blind should have approximately 1mm to 3mm clearance. If not, re-position the brackets to suit. (on tight fitting blinds, induced friction may cause a drive wheel to retract and allow a blind to fall down. With loose fitting blinds, a small movement of a bracket could also allow the blind to completely come out of a bracket and fall down).
- For a variety of reasons, interconnected blinds may not line up perfectly when fully raised. It is best to align the blinds when they are lowered to the window sill level.
- Ensure that your hands & all work surfaces are scrupulously clean. Pen ink or other contaminants can easily be transferred onto fabric, and may be impossible to remove.

OPERATION, CARE & MAINTENANCE

ROLLER BLINDS

Modern roller blinds are made of high-grade materials to exacting specifications, and as long as they are installed, operated and maintained properly as per the instructions listed below, they should provide many years of satisfactory service. If requested at the time of installation, the installer can demonstrate the correct use of the blinds, and indicate how best to clean them.

OPERATION - SIDEWINDER CONTROL:

Pull down on the looped chain at the side of the blind to raise or lower the blind. The blind will lock into position when the chain is released. Make sure that the chain is pulled vertically downwards. Pulling at an angle can damage the control unit and possibly the fabric.

OPERATION - SPRING CONTROL:

To lower a spring operated blind, firmly grasp the centre hand-grip and pull the blind downwards. When the desired position is reached, stop and slowly allow the blind to travel upwards until it locks into position.

To raise a spring operated blind, firmly grasp the centre hand-grip and jerk the blind downwards to release the lock and allow the blind to travel upwards. When the desired position is reached, stop and slowly allow the blind to travel upwards until it locks into position. Don't let go of the hand-grip until the blind is locked in place.

TIPS:

Make sure that curtains are not trapped in the blind as it is being raised. This may result in damage to the blind.

Do not allow a blind to be blown about in the wind. Either close the window, or raise the blind away from the opening to prevent damage to the blind.

Do not lower a roller blind beyond the bottom of the window.

CLEANING:

Remove dust with a vacuum cleaner or compressed air.

Do not scrub.

Do not use solvents or any abrasive substance which might damage the coating of the fabric.

Clean with a sponge or soft brush soaked in water using mild detergent. Water temperature should be no more than 30degC, and soap flakes/detergent ratio should be no more than 5gm per litre of water.

Rinse with clear water.

Leave the blind down until completely dry.

Avoid cleaning during hot weather.

Some small marks or stains may be removed by gently rubbing the fabric with a clean white pencil eraser.

Commercial blind cleaning services are also available in some areas.

MAINTENANCE:

In the unlikely event that your blind requires maintenance, contact your retailer for assistance. Spare parts are readily available, and most repairs can be carried out with very little inconvenience to the customer.